

# Roller shutter escape crank set

## For tubular drive model E22 up to 12 Nm

### Assembly of the crank set



**Caution**

The roller shutter escape crank set must only be used with an escape drive adapter. Never screw the escape drive adapter to the shaft. Make absolutely sure that the installation direction of the escape drive adapter is correct! The arrows on the white ring of the escape drive adapter must be pointing in the wind-up direction.

Please ensure that the emergency crank handle and the pivoting bearing are decoupled before motorised operation.

The aluminium drive adapter of the bevel gearbox must be screwed to the barrel with the supplied screw M4 x 10mm.

	<p>Klick-Klick-Klick</p> <hr/>	<p>Position of holder for connecting rod</p>